

## Drain tempering kit for UR and UE models 20 to 65 kg/hr

### Requirements for KITUTEMP65:

1. Minimum incoming water pressure: 40 psi.
2. Minimum size for incoming water line: ½"
3. Water supply connection is ½" FPT and drain connection is 1 ¼" CPVC female

→ **LEGGI E CONSERVA  
QUESTE ISTRUZIONI** ←  
**READ AND SAVE  
THESE INSTRUCTIONS**



### Components contained in KITUTEMP65:

1. Solenoid valve assembly and rubber gasket
2. CPVC tee assembly
3. 3/8" rubber hose
4. Hose clamps
5. Electrical connectors



### Installation of plumbing for UE Humidifiers:

1. Install CPVC tee assembly onto existing drain pipe (side or bottom: see pictures below)
2. Install solenoid valve assembly onto water fill connection using the rubber gasket.
3. Cut rubber hose to proper length and install between solenoid and tee assembly.

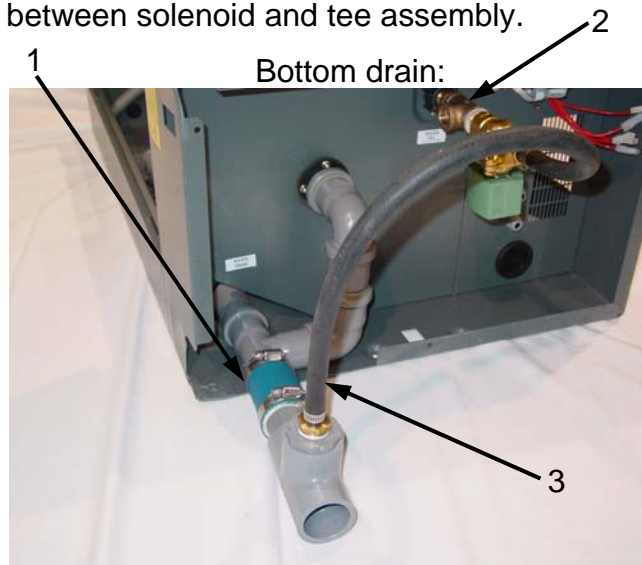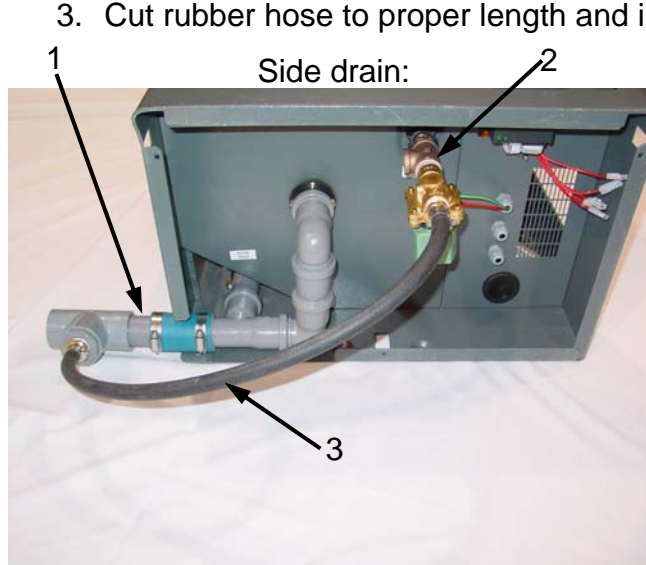

## Installation of plumbing for UR humidifiers:


1. Install CPVC tee assembly onto existing drain pipe.
2. Install solenoid valve assembly onto water fill connection using the rubber gasket.
3. Cut rubber hose to proper length and install between solenoid and tee assembly.



## Wiring Connections for UE and UR humidifiers:

1. Connect 2 red wires from solenoid to wires on drain pump relay (RD) coil (A1 and A2) using supplied electrical connectors.
2. Connect green wire from solenoid to chassis ground.

Connect to this wire      A2    A1      Connect to this wire

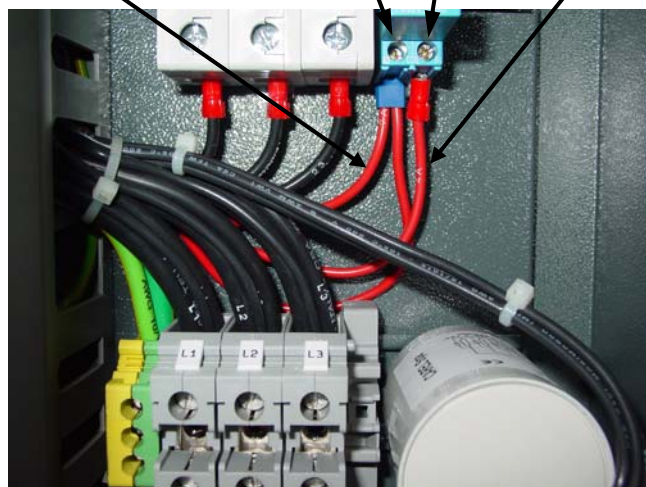

Chassis ground

